

## Wrapid Sleeve™


One-piece protective sleeve with pre-attached closure

### Product Description



Canusa Wrapid Sleeves™ are shipped pre-cut with a pre-attached closure. The adhesive is protected from contamination by an inner liner.


### Storage & Safety Guidelines

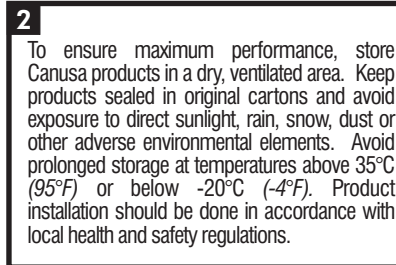

To ensure maximum performance, store Canusa products in a dry, ventilated area. Keep products sealed in original cartons and avoid exposure to direct sunlight, rain, snow, dust or other adverse environmental elements. Avoid prolonged storage at temperatures above 35°C (95°F) or below -20°C (-4°F). Product installation should be done in accordance with local health and safety regulations.

These installation instructions are intended as a guide for standard products. Consult your Canusa representative for specific projects or unique applications.

### Equipment List

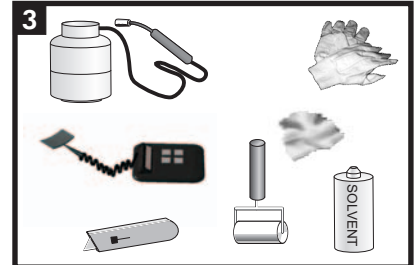


Propane tank, hose, torch & regulator  
Appropriate tools for surface abrasion  
Knife, roller, rags & approved solvent cleanser  
Digital thermometer with suitable probe  
Standard safety equipment; gloves, goggles, hard hat, etc.


### Surface Preparation and Pre-Heat Chart

4	Standard Sleeves		Surface Preparation				Min. Pre-Heat Temp. °C (°F)	
			SIS Standard		SSPC Standard			
			Minimum	Preferred	Minimum	Preferred		
Mastic	KLG	KTG	St2	Sa2	SP2	SP6	50	(122)
	KLC	KTC	St2	Sa2	SP2	SP6	60	(140)
	KLS	KTS	St2	Sa2	SP2	SP6	65	(150)
	KLO	KTO	St2	Sa2	SP2	SP6	75	(167)
	KLON	KTON	St2	Sa2	SP2	SP6	75	(167)
	KLNN	KTNN	St3	Sa2½	SP3	SP10	90	(195)
Hot Melt	KLA		St3	Sa2½	SP3	SP10	60	(140)
	KLAS		St3	Sa2½	SP3	SP10	90	(195)


### Flame Intensity & Torch Size

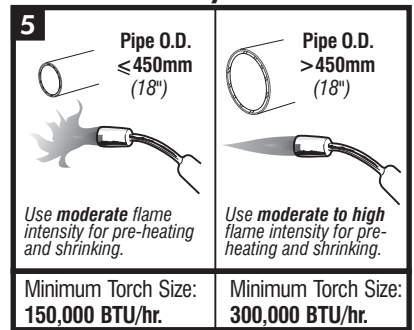


### Surface Preparation

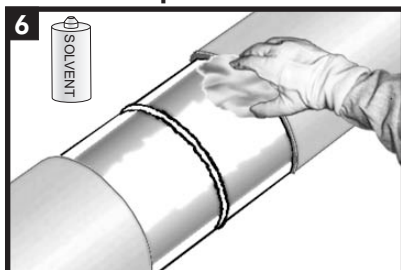

Ensure that the PE coating edges are beveled to 30°. Clean exposed steel and adjacent pipe coating with a solvent cleanser to remove the presence of oil, grease, and other contaminants.

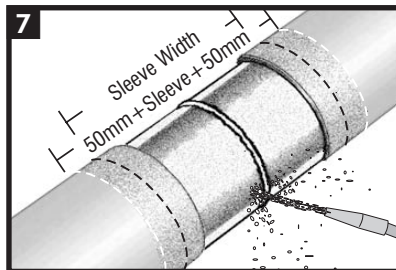


Ensure that the pipe is dry before cleaning. Prepare the steel joint area using the Surface Preparation and Pre-Heat Chart as a guideline. Lightly abrade the pipe coating adjacent to the cutback area to a distance of 50mm (2") beyond each end of the sleeve width.

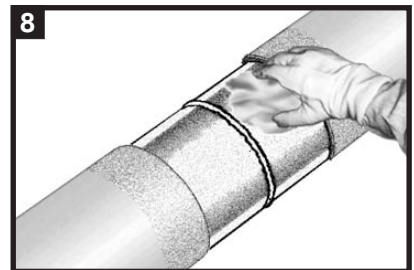

Wipe clean or air blast the steel and pipe coating to remove foreign contaminants.

### Pre-Heat

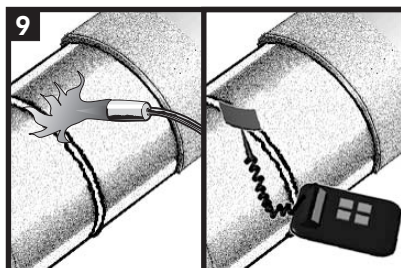


Pre-heat the joint area to the minimum required temperature (see Surface Preparation & Pre-Heat Chart). Using a temperature measuring device, ensure that the correct temperature is reached on the steel and at least 50mm (2") on each side of the sleeve.

### Sleeve Installation




Partially remove the release liner and gently heat the underlap approximately 150 mm (6") from the edge.

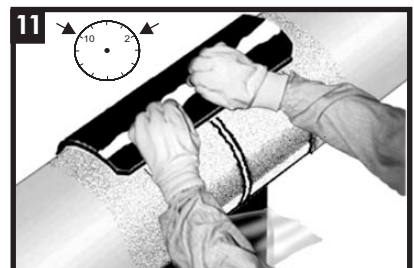


Centre the sleeve over the joint so that the sleeve overlaps between the 10 and 2 o'clock positions. Press the underlap firmly into place.

# Wrapid Sleeve™


## Sleeve Installation

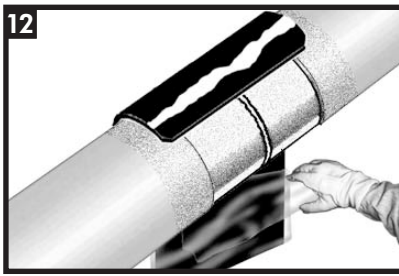

Remove the remaining release liner.

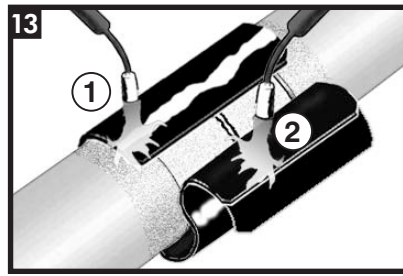


Wrap the sleeve loosely around the pipe, ensuring the appropriate overlap. Gently heat the backing of the underlap and the adhesive side of the overlap.

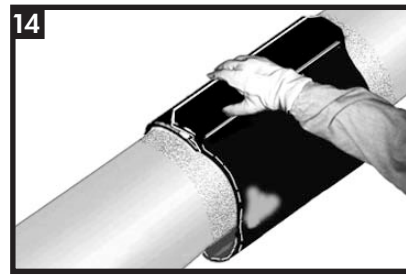

Press the closure firmly into place.




Gently heat the closure and pat it down with a gloved hand. Repeating this procedure, move from one side to the other. Smooth any wrinkles by gently working them outward from the centre of the closure with a roller.

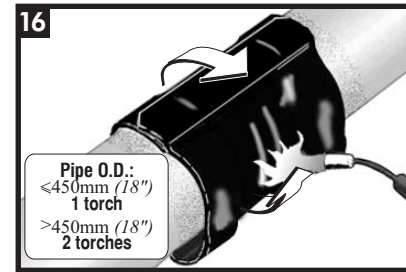


Pipe O.D.:  
 <450mm (18")  
 1 torch  
 >450mm (18")  
 2 torches


Using the appropriate torch, begin at the centre of the sleeve and heat circumferentially around the pipe. Use broad strokes. If utilizing two torches, operators should work on opposite sides of pipe.

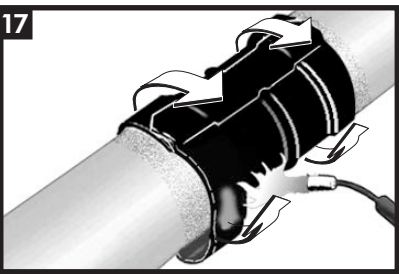


Continue heating from the centre toward one end of the sleeve until recovery is complete. In a similar manner, heat and shrink the remaining side.

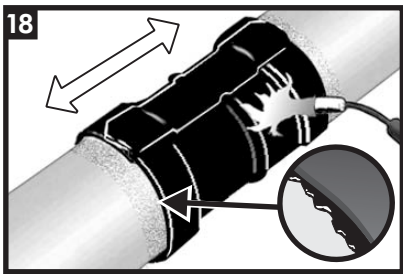


Shrinking has been completed when the adhesive begins to ooze at the sleeve edges all around the circumference. Finish shrinking the sleeve with long horizontal strokes over the entire surface to ensure a uniform bond.

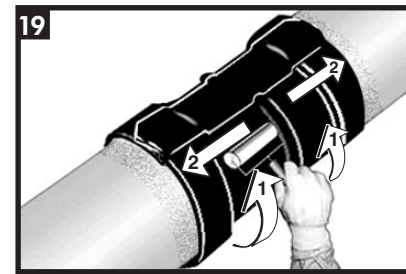


While the sleeve is still hot and soft, use a hand roller to gently roll the sleeve surface and push any trapped air up and out of the sleeve, as shown above. If necessary, reheat to roll out air.

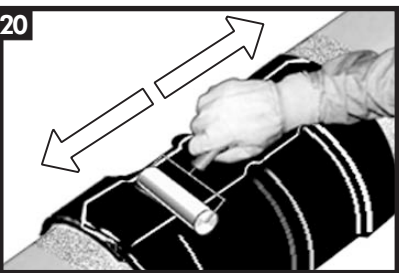

Continue the procedure by also firmly rolling the closure with long horizontal strokes from the weld outwards.

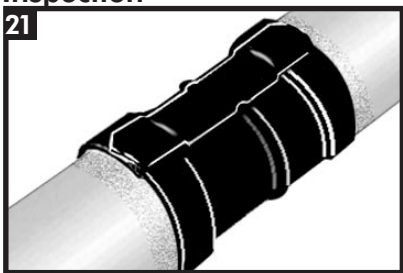


## Inspection

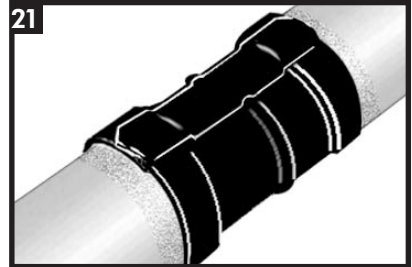

Visually inspect the installed sleeve for the following:

- Sleeve is in full contact with the steel joint.
- Adhesive flows beyond both sleeve edges.
- No cracks or holes in sleeve backing.

## Backfilling Guidelines

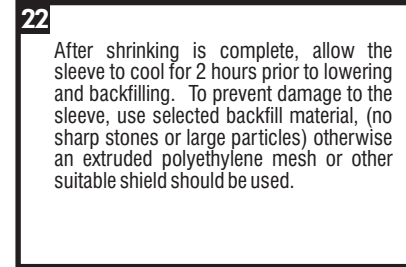

After shrinking is complete, allow the sleeve to cool for 2 hours prior to lowering and backfilling. To prevent damage to the sleeve, use selected backfill material, (no sharp stones or large particles) otherwise an extruded polyethylene mesh or other suitable shield should be used.



A SHAWCOR COMPANY

### Canada

CANUSA-CPS  
 a division of SHAWCOR LTD.  
 25 Bethridge Road  
 Rexdale, Ontario  
 M9W 1M7,  
 Canada  
 Tel: +1 (416) 743-7111  
 Fax: +1 (416) 743-5927

### U.S.A./Latin America

CANUSA-CPS  
 a division of SHAWCOR INC.  
 2408 Timberloch Place  
 Building C-8  
 The Woodlands, Texas  
 77380, U.S.A.  
 Tel: +1 (281) 367-8866  
 Fax: +1 (281) 367-4304

### Europe/Middle East

CANUSA-CPS  
 a division of Canusa Systems Ltd.  
 Unit 3, Sterling Park  
 Gatwick Road  
 Crawley, West Sussex  
 England RH10 9QT  
 Tel: +44 (1293) 541254  
 Fax: +44 (1293) 541777

### Asia/Pacific

CANUSA-CPS  
 BrederoShaw (S) Pte Ltd  
 101 Thomson Road  
 #17-01/02, United Square  
 Singapore  
 307591  
 Tel +65-6732-2355  
 Fax +65-6732-9073

Canusa warrants that the product conforms to its chemical and physical description and is appropriate for the use stated on the installation guide when used in compliance with Canusa's written instructions. Since many installation factors are beyond our control, the user shall determine the suitability of the products for the intended use and assume all risks and liabilities in connection therewith. Canusa's liability is stated in the standard terms and conditions of sale. Canusa makes no other warranty either expressed or implied. All information contained in this installation guide is to be used as a guide and is subject to change without notice. This installation guide supersedes all previous installation guides on this product. E&OE